

Connecting your Interwrite DualBoard™

- 1) Plug the Workspace RF Hub into a USB port on your computer or USB hub

Your computer will automatically detect the USB devices. The blue LED on the Workspace RF Hub will light up when it is plugged in.

- 2) Press the lighted Activation button on the RF Hub connected to your computer. The blue light will start blinking.

- 3) Press the lighted Activation button on the RFCOM attached to the DualBoard™. (You have two minutes to complete this step or you will have to start over from step 1)

When the two RF devices have successfully *paired*, the blue button on the RF Hub on your computer will stop blinking and remain a solid blue until either the computer or the board is turned off. Pairing the RF devices is a one-time operation. They will recognize each other when the computer and the Interwrite DualBoard™ are turned on.